

Flush Shutter DC

Z-Wave Gateway Compatibility

!NOTE: Qubino Flush Shutter DC is Z-Wave certified and it should work with ALL Z-Wave certified gateways.

The following list contains **ONLY** the gateways which have been tested with Qubino modules.

If you're missing a specific gateway, it means that the gateway was not tested with this Qubino module

Legend: - Supported - Not Supported

Gateway	Supported functions						
Aeotec Autopilot v1.1.5	UP	DOWN	Set Position	Tilt Angle	Measure Temperature	Watts	
Bosch IoT Gateway Software v9.2 zw5.0.5	UP	DOWN	Set Position	Tilt Angle	Measure Temperature	Watts	
Comfort Click Colibri (bOS Configurator v4.6.24)	UP	DOWN	Set Position	Tilt Angle	Measure Temperature	Watts	
FHEM v5.9	UP	DOWN	Set Position	Tilt Angle	Measure Temperature	Watts	
Futurehome CUBE-1V1-EU v2.0.0	UP	DOWN	Set Position	Tilt Angle	Measure Temperature	Watts	
HomeSeer v3.0.0.535	UP	DOWN	Set Position	Tilt Angle	Measure Temperature	Watts	
Schwaiger HA101 v4.1.0	UP	DOWN	Set Position	Tilt Angle	Measure Temperature	Watts	
Silicon Labs Zware zip7.14.02.1zware7.14.2.0	UP	DOWN	Set Position	Tilt Angle	Measure Temperature	Watts	
VeraEdge v1.7.4969	UP	DOWN	Set Position	Tilt Angle	Measure Temperature	Watts	
A1 Smart Home v962	UP	DOWN	Set Position	Tilt Angle	Measure Temperature	Watts	
Animus Heart fw 2.0.2 sys 2.0.0	UP	DOWN	Set Position	Measure Temperature	Watts	Tilt Angle	
Athom Homey v3.1.0 (Qubino app v3.0.2)	UP	DOWN	Set Position	Measure Temperature	Watts	Tilt Angle	
Domoticz v3.9052-STABLE	UP	DOWN	Set Position	Measure Temperature	Watts	Tilt Angle	
Eedomus+	UP	DOWN	Set Position	Measure Temperature	Watts	Tilt Angle	
EKZ Smart Home HUB v3.0.0	UP	DOWN	Set Position	Measure Temperature	Watts	Tilt Angle	
Fibaro Home Center 2 v4.580	UP	DOWN	Set Position	Measure Temperature	Watts	Tilt Angle	
Fibaro Home Center 3 v5.050.13	UP	DOWN	Set Position	Measure Temperature	Watts	Tilt Angle	
Fibaro Home Center Lite v4.550	UP	DOWN	Set Position	Measure Temperature	Watts	Tilt Angle	
Homee v2.27.1	UP	DOWN	Set Position	Measure Temperature	Watts	Tilt Angle	
HomeSeer v4.1.2.0 zw 3.0.2.0	UP	DOWN	Set Position	Measure Temperature	Watts	Tilt Angle	
Hubitat Elevation	UP	DOWN	Set Position	Measure Temperature	Watts	Tilt Angle	
Indigo Domotics v7.3	UP	DOWN	Set Position	Measure Temperature	Watts	Tilt Angle	

Gateway	Supported functions					
<i>Ingelec</i> DMPASS01 v040202	UP	DOWN	Set Position	Measure Temperature	Watts	Tilt Angle
<i>Jeedom</i> v3.2.12	UP	DOWN	Set Position	Measure Temperature	Watts	Tilt Angle
<i>Popp</i> HUB v2.3.8	UP	DOWN	Set Position	Tilt Angle	Measure Temperature	Watts
<i>Rostelecom</i> HUB1-B (ZwaveMe v2.3.8)	UP	DOWN	Set Position	Measure Temperature	Watts	Tilt Angle
<i>StarVedia</i> G1 v040202	UP	DOWN	Set Position	Measure Temperature	Watts	Tilt Angle
<i>WeBeHome</i> HG2+ v4.07.04	UP	DOWN	Set Position	Measure Temperature	Watts	Tilt Angle
<i>Z-Wave.Me</i> v3.0.6	UP	DOWN	Set Position	Measure Temperature	Watts	Tilt Angle
<i>Home Assistant</i> v0.97.2	UP	DOWN	Measure Temperature	Watts	Set Position	Tilt Angle
<i>ImperiHome</i> (app for VeraEdge)	UP	DOWN	Tilt Angle	Measure Temperature	Set Position	Watts
<i>Mediola</i> AIO Gateway V5+ v1.1.13	UP	DOWN	Set Position	Measure Temperature	Tilt Angle	Watts
<i>Schwaiger</i> HA101 v3.3.0	UP	DOWN	Tilt Angle	Watts	Set Position	Measure Temperature
<i>Tellus</i> TellStick Znet LiteV2 v1.2.0	UP	DOWN	Measure Temperature	Watts	Set Position	Tilt Angle
<i>Zipato</i> Zipatile v1.3.61j	UP	DOWN	Set Position	Watts	Tilt Angle	Measure Temperature
<i>OpenHAB2</i> v2.4.0-STABLE	UP	DOWN	Watts	Set Position	Tilt Angle	Measure Temperature
<i>Samsung</i> SmartThings v000.021.00012	UP	DOWN	Watts	Set Position	Tilt Angle	Measure Temperature
<i>Universal Devices</i> Gateway ISY994 v5.0.14MK	UP	DOWN	Set Position	Tilt Angle	Measure Temperature	Watts
<i>Ezlo</i> Atom v0.8.98	UP	DOWN	Set Position	Tilt Angle	Measure Temperature	Watts
<i>Devol</i> v8.84.1 2019-05-17	Measure Temperature	UP	DOWN	Set Position	Tilt Angle	Watts
<i>Domoticz</i> v4.11213-BETA	Measure Temperature	UP	DOWN	Set Position	Tilt Angle	Watts
<i>OpenZWave</i> v1.4 + OpenZWave Control Panel	Set Position	UP	DOWN	Tilt Angle	Measure Temperature	Watts
<i>Zipato</i> Zipabox v1.3.61	Set Position	UP	DOWN	Tilt Angle	Measure Temperature	Watts