

### Setting The System Up

Enroll your smart phone to Motorized Cylinder as master controller and then enroll wireless keypad. (P.S. During enrolling of keypad, touch 1111 to generate an RF signal.)


After that, connect to Motorized Cylinder via master phone and go to settings/users to check keypad is enrolled.



### Generating Temporary Password

Choose the motorized cylinder that you want to create temporary password and go to Settings/User/Create Temporary Password. Choose "Via Keypad" and choose "Guest". Choose check-in check-out dates and touch to generate password.

You can send this 8 digit code to your guest.

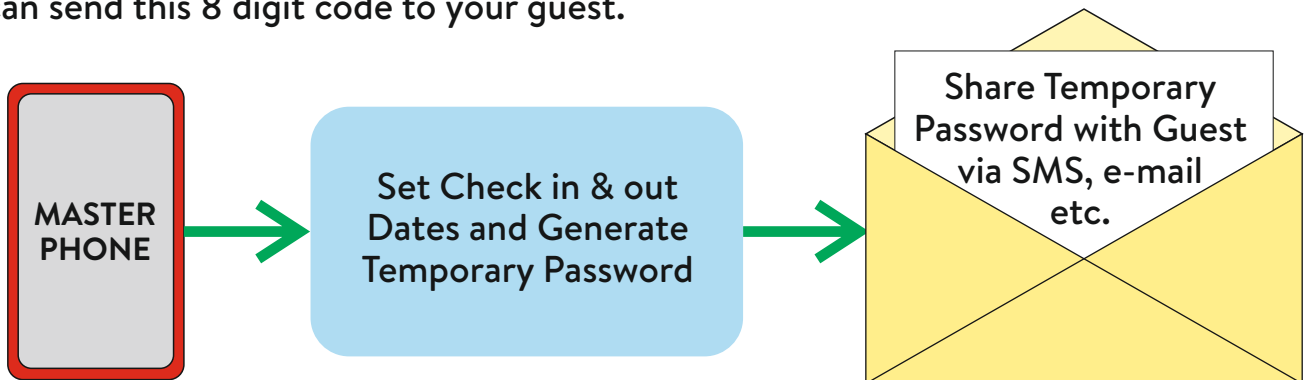

### Using Temporary Password

Wake the keypad up and touch 8 digit password. The door will be unlocked. After first usage, the last 4 digit of received password will be valid between check-in & out dates.

