


HEATIT EXTERNAL ROOM SENSOR

Quick Guide

01.01.22 Ver 2022-A



Use up to 1.5mm² cable to connect the device to the thermostat.

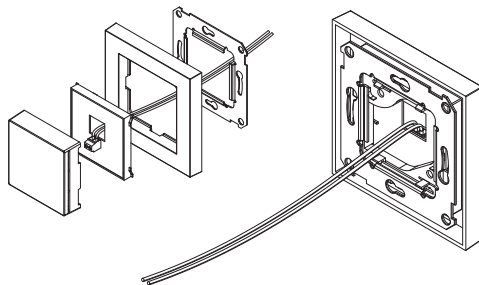

The product is connected from the terminals on the product to the terminals marked with "Sensor" on the thermostat.

INTRODUCTION

Heatit External Room Sensor is designed for use with Multireg and Heatit thermostats. The sensor can be mounted directly on a wall or on the outside of a wall box. Fits into System-55 frames. The product is delivered in a matte finish.

When used with a thermostat, dimmer or other products that emit heat, it is recommended that the sensor be mounted below the other products.


It is not possible to connect the sensors in series or in parallel.

INSTALLATION

Installation must be done by a qualified electrician in accordance with national building codes. Before installation, disconnect the power to the thermostat from the mains. During installation of the sensor, power to the thermostat must be disconnected AT ALL TIMES.

TECHNICAL DATA

NTC	10k Ω @25°C
Cable	\varnothing 1.5mm ²
Size	84 x 84 x 20mm
IP-Code	IP 21
Approvals	CE

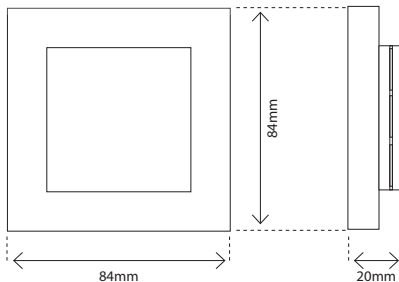

Heatit Controls AB can not be held liable for typographical errors, other errors or omissions in our information. Product specifications may change without further notice. All electrical installations must be carried out by a licensed electrician. The product must be installed in accordance with national building codes and our installers manual.

heatit
CONTROLS

Heatit Controls AB | Läkavägen 4, 454 31 BRASTAD, SWEDEN
Phone: +47 61 18 77 77 | post@heatit.com - www.heatit.com

heatit
CONTROLS




HEATIT EXTERNAL ROOM SENSOR

Quick Guide

01.01.22 Ver 2022-A



Bruk opptil 1.5mm² kabel for å koble enheten til termostaten.

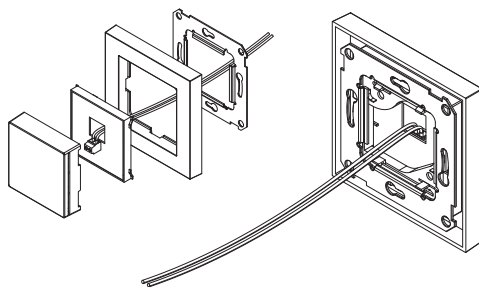

Produktet kobles fra terminalene på produktet til terminalene markert med "Sensor" på termostaten.

INNLEDNING

Heatit External Room Sensor er designet for bruk sammen med Multireg og Heatit termostater. Føleren kan monteres direkte på vegg eller utenpå en veggboкс. Passer inn i de fleste rammer som brukes i Norge (Ssystem 55, Elko RS16, Schneider Exxact og Norvesco). Produktet leveres i matt utførelse.

Ved bruk sammen med termostat, dimmer eller andre produkter som avgir varme, anbefales det at føleren monteres under de andre produktene.


Det går ikke å serie- eller parallellkoble følerne.

INSTALLASJON

Produktet skal kun installeres av en registrert installasjonsvirksomhet i henhold til norske bygg-forskrifter. Før installasjonen må all strømtilførsel til termostaten kobles fra. Termostaten MÅ TIL ENHVER TID være frakoblet under montering av sensoren.

TEKNISKE DATA

NTC	10kΩ @25°C
Kabel	Ø1,5mm ²
Størrelse	84 x 84 x 20mm
IP-klasse	IP 21
Sertifisering	CE

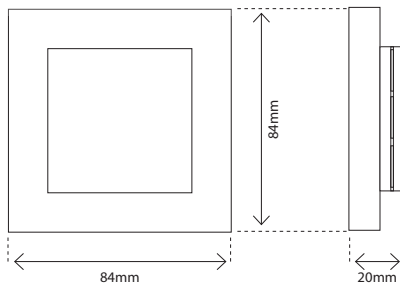

Heatit Controls AB tar forbehold om typografiske feil, andre feil eller mangler i vår informasjon. Produktspesifikasjoner kan bli endret uten ytterligere varsel. Skal kun installeres av en registrert installasjonsvirksomhet. Produktet skal installeres i henhold til gjeldende NEK 400 og installasjonsveiledning.

heatit
CONTROLS

Heatit Controls AB | Läkarvägen 4, 454 31 BRASTAD, SWEDEN
Phone: +47 61 18 77 77 | post@heatit.com - www.heatit.com

heatit
CONTROLS

CE